## Water Release Event Algorithm


Central Zone Infection Prevention and Control (IPC)



- 1. Relocate patients
- 2. Erect Hoarding<sup>1</sup> around the affected area
- 3. **Determine** if water is a clean or black water source
- 4. Notify IPC



Dry and dehumidify within 48 hours **OR** proceed to abatement process




- Follow the ICRA and PM documents<sup>1</sup>
- Remediation and Construction Clean
- Infection Control Post Construction Assessment Checklist<sup>1</sup>
- Return to Service Clean by ES





Can supplies<sup>2</sup> be cleaned and disinfected or sterilized?

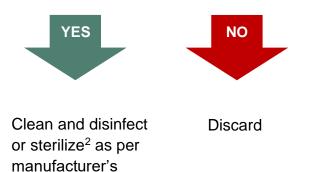



2. Equipment Cleaning | Alberta Health Services

instructions



For more information contact: <u>ipccenzadmin@ahs.ca</u> © 2023 Alberta Health Services COBYENC-SA https://creativecommons.org/licenses/by-nc-sa/4.0/

Original date: November 2023