

## Urine Collection - Pediatric Male (LTR71417)

Last Approved Time: 11/11/2022

Revision: 3.40

Specimen will not be tested if label or requisition is missing information.

Following the instructions below is important for providing you with accurate test results.

Do not use baby oil, lotions or powders before the collection.

Wash your hands with soap and water.



Tear open the foil packet and remove the towelette.

Wash the baby's penis and testicles.

Wash the baby's rectal area **last**.

Let the baby's skin **dry**.




Remove the U-bag from its pouch.




Remove the paper from the **bottom** half of the adhesive on both sides.

If the baby is very active, fit the baby's penis and testicles through the hole in the U-bag first and then remove the paper from the adhesive.



Fit the baby's penis and testicles through the hole in the U-bag.

Stick the adhesive to the baby's skin, starting at the narrow area of skin between the penis and rectum and working outward.

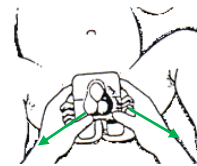


Remove the paper from the top half of the adhesive on both sides.


Stick the top half of the adhesive patch to the baby's skin.

Avoid wrinkles.

Press all around the penis and testicles.

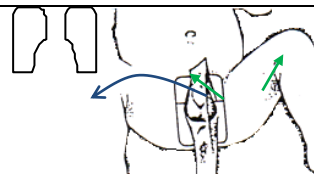

Wash your hands with soap and water.

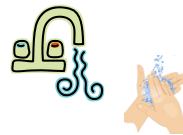

Make sure the cup is labelled with all of the following:

- baby's full first and last name
- baby's healthcare number
- date and time of collection



Jane Doe  
12345 6700  
Date Jan 3  
Time 9:00am

Immediately after baby urinates (pees) into the bag,

- Remove the bag.
- Remove the blue tab on the bottom of the bag or cut the corner of the bag near the blue tab.
- Pour the urine into the cup.



Please do **not** touch the inside of the cup with your fingers. Put the lid on the cup.

Wash your hands with soap and water.



If collecting at home: Please deliver specimen to the laboratory today.

Store in a cool, dark place (e.g. refrigerator) if more than 20 mins between collection and going to the laboratory.