




Placement of Epic Barcode Label:

Place barcode label onto specimen container as shown in the figures below for Correct Labelling:

- Barcode label must include white space on both ends of the barcode. Do not cut or fold the label.
- Barcode must be centered onto the flat section of the container and as straight as possible.
- Barcode label must be placed at or just above the foil edge allowing for a space of 1/16 of an inch maximum.
- Barcode label must be **completely wrapped and adhered** to the specimen container surface.

Correct Labelling

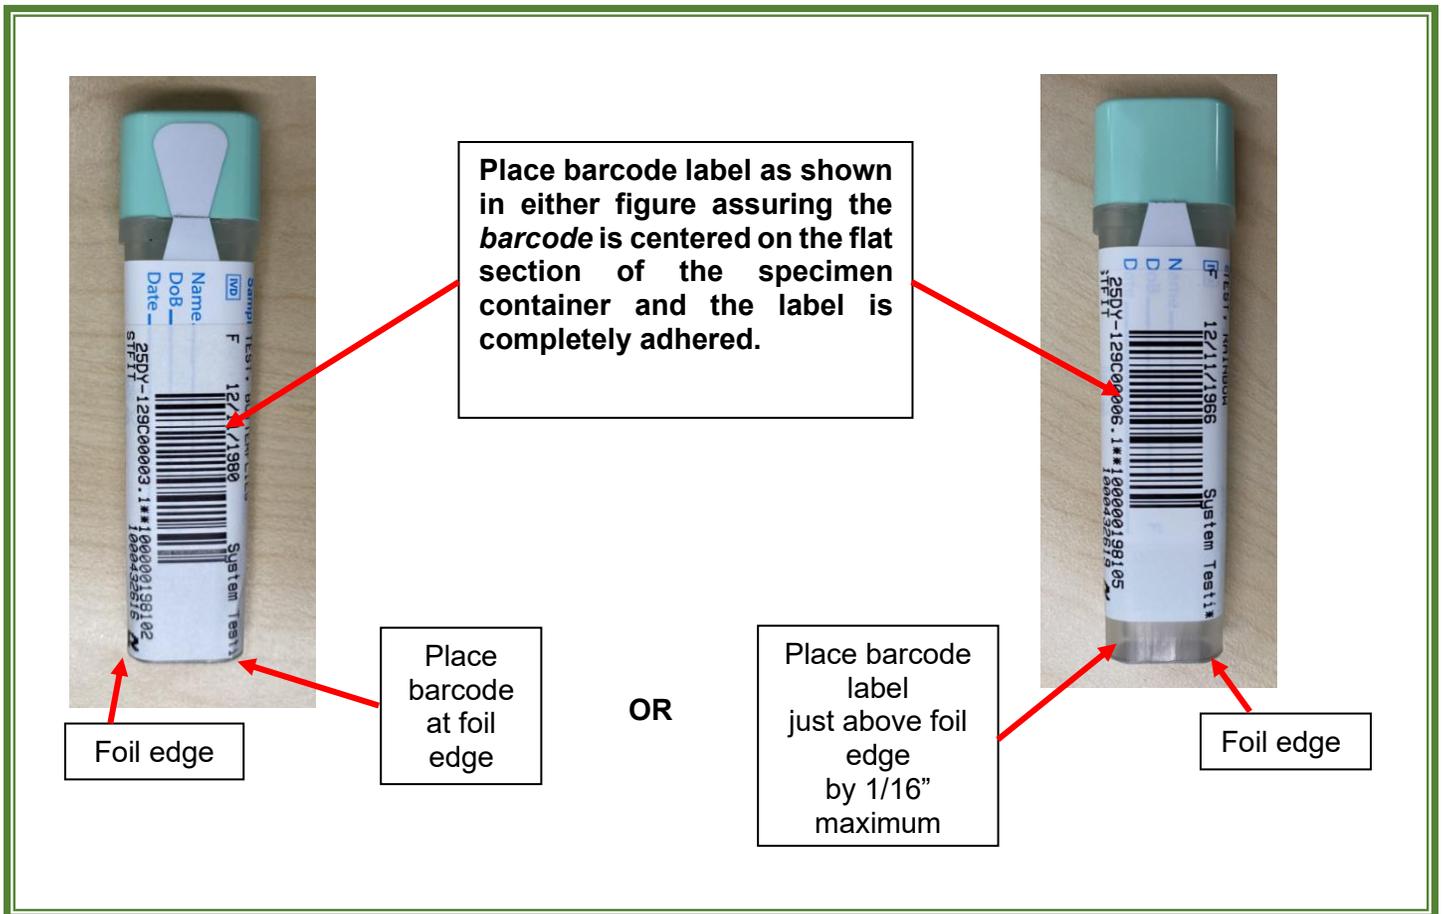

Incorrect Labelling

